

The right way to measure.

Important tips on the operation and maintenance of the testo 104-IR

Preparation



Do not look directly into the laser. This can cause blindness.



Measure without contact or with the contact



Do not measure from distances > 1 m with the infrared system



The two laser spots show the exact limits of measurement, insert the measurement area. Ensure both laser spots are positioned on the measurement object.



For penetration minimum 3 cm.

IR measurement



Point the infrared side of the measuring instrument at the object to be measured and switch on with the [A] button.



Press and hold the [A] button, and continue pointing the laser at the measurement object (2 secs. sufficient).



Release button:

· Measurement result is frozen [Hold]. Switch through measurement values of last measurement with [Hold/Min/Max] button.

Tip: If the IR temperature measured exceeds the limit value, a penetration measurement must be carried out in order to determine the core temperature.

Penetration measurement



Penetration mode: Fold out probe or press the v button (if probe already folded out).



Insert penetration probe Auto Hold activated: into measurement obiect.

Hold two identical measurement objects together and place the penetration probe between the two objects. Does not damage the



 Audible signal indica- measurement result tes end of measurement Auto Hold and final value are shown in display.

Auto Hold deactivated:

 End measurement by pressing [Hold] button. Final value is displayed.



Switch through last measurement with [Hold/Min/Max] button.

Care and maintenance



Clean instrument under running water with mild detergent.



Wet lens carefully with water or surgical spirit, and clean with a cotton swab.